M-36 CM

User Manual

MICRO SYSTEM CD/MP3 WITH USB

Please read the instruction carefully before operating the unit.

English

LOCATION OF CONTROLS

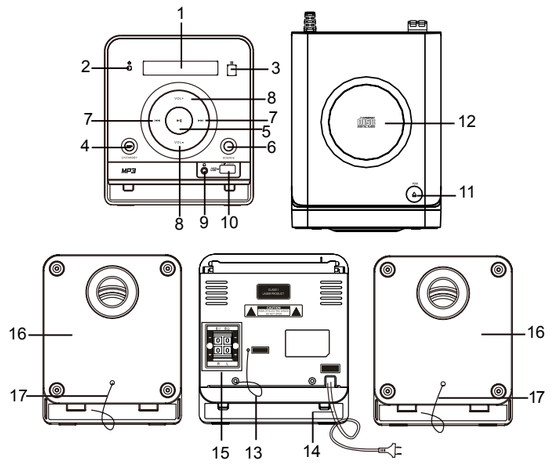

1. LED display
2. ⏻ STANDBY indicator
3. Remote sensor
4. ⏻ **STANDBY** button
5. ⏯ PLAY/PAUSE button
6. **SOURCE** button
7. ⏮, ⏭ buttons: Skip / search / Tuning
8. **VOL+/-** buttons
9. Earphone jack
10. USB port
11. ⏏ Disc door open button
12. Disc compartment
13. FM antenna
14. AC cord
15. Speaker terminals
16. Speaker box
17. Speaker wire

REMOTE CONTROL

R1. ⏻ **STANDBY** button
R2. **MUTE** button
R3. **0-9,10+** number buttons
R4. **PROG** button : To program playback sequences.
R5. **ALB-/+** buttons : Folder down /up
R6. **VOL-/+** buttons
R7. ⏮ / ◀◀ /**M- (MEMORY -)** button: Skip / search / Preset down
R8. ⏭ / ▶▶ / **M+ (MEMORY +)** button: Skip / search / Preset up
R9. ⏯PLAY/PAUSE button
R10. **TUN-/+** buttons: Tuning
R11. **CD** button
R12. **USB** button
R13. **FM** button
R14. **SOURCE** button
R15. **INTRO** button
R16. **REPEAT** button
R17. **RANDOM** button
R18. **AUTO/ STOP** button
R19. **SLEEP** button
R20. **EQ** button
R21. **MEMORY** button
R22. **ST/MONO** button

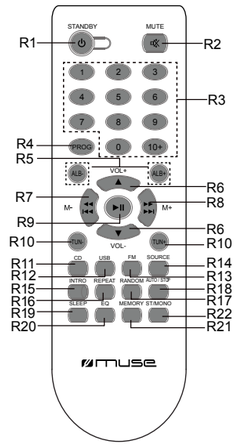

Installing Battery
Insert 2 “AAA/ UM4” batteries to the remote control prior to use. Make sure to match their polarities (+/-) to the markings inside the compartment.

Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

NOTES:
- Never recharge the batteries, apply heat to them or take them apart.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not throw batteries in fire!
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

SPEAKER CONNECTION

1. Insert the speaker cables by pushing down the terminal lever of the Left Speaker Terminal and the Right Speaker Terminal.
2. Connect the speaker to Speaker Terminals, with BLACK wire to BLACK terminals and WHITE/BLACK wire to WHITE terminals.



Push Speaker terminal tab down to insert wire.



Release tab to lock wire in the terminal.

POWER SUPPLY

This set operates on AC 100-240V~ 50/60Hz.
Connect the power cord to a convenient AC wall outlet.

AUDIO CONTROLS

1.Press ⏻ **STANDBY** button to turn on the unit.
2.The function is selected by pressing **SOURCE** button repeatedly, or pressing **CD** , **USB** or **FM** button on remote control respectively.

VOLUME
Press **VOL-/+** to adjust the sound to comfortable level. The volume level will be displayed for a few seconds.

MUTE
To cut off the sound from the speakers temporarily, press **MUTE** button on remote control. The “MUTE” icon is shown on the display. Press **MUTE** button again to cancel Mute mode and restore the sound from the speakers.

EQ
Press **EQ** button on remote control to toggle among the different sound effects (FLAT / CLASSIC /ROCK /POP / JAZZ). The selection will show on display for few seconds.

DISC OPERATION

1. Press ⏻ **STANDBY** button to turn on the unit.
2. Open the CD door by pushing the CD door Open button ⏏.
3. Place the CD with label side up inside the CD compartment and close the CD door.
4. Press **SOURCE** or **CD** button to select CD function. The “CD” icon is displayed. After a few seconds, the total number of track and total play time will appear on display. Press ⏯ to start playback.

BASIC OPERATION
Play/pause
Press ⏯ to pause playback. Press again to resume.

Select a track
-By ⏮ / ⏭
Press ⏮ / ⏭ to select a track.

-By number buttons **10+**, **0-9**
Use the number buttons to input the track number, and it will start playback from the selected track automatically.
If you want to input the track number bigger than 9, use the **10+**, **0-9** button.
Example 1, to select the 10th track, firstly press **10+** button once. “_ _” appears on display, then press number button **1** & **0**.
Example 2, to select the 25th track, firstly press **10+** button once. “_ _” appears on display, then press number button **2** & **5**.)

Fast search backward/forward
Press and hold ⏮ / ⏭ to search quickly within a track.

Select a folder (mp3 only)
•Press **ALB+** on remote control to select the first track of next folder of your current disc or USB.
•Press **ALB-** on remote control to select the first track of previous folder of your current disc or USB.

USB OPERATION

1. Press ⏻ **STANDBY** button to turn on the unit.
2. Connect an USB device to the USB port on unit.
3. Press **SOURCE** or **USB** button to select USB mode. After a few seconds, the total number of folder and track will appear on display. Press ⏯ to start playback.

Notes:
- Do not put anything other than a USB device to the port of this unit. Other objects may damage the USB mechanism.
- The USB socket must not be connected to the computer directly, for that may damage the unit.
- There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.

RADIO

Listening to the radio
1. Press ⏻ **STANDBY** button to turn on the unit.
2. Press **SOURCE** or FM button to select FM Radio mode. “FM” appears on display.
3. Tune to a desired station with ⏮ / ⏭ on unit or **TUN-/+** on remote control.

Note:
- For a better reception in FM, extend the antenna.
-If a stereo broadcast is received, “ST” is displayed. Press **ST/MONO** button on remote control to switch between Mono and Stereo mode.

Presetting radio stations
The unit can store up to 20 FM stations in its memory.
Manual preset
1. Tune to a desired station.
2. Press **MEMORY** button on remote control. “01” flashes on display.
3. Press **M-/+** on remote control to select a desired preset location. Press **MEMORY** again to save the radio station as the selected preset station.
4. Repeat above steps to preset a maximum of 20 stations.

Auto preset
In **FM** mode, press **AUTO** on remote control to start automatic preset programming.
Radio frequencies will be browsed and radio stations stored automatically. When all the available radio stations are stored or all memory locations are full, the auto preset programming function will stop.

Retrieving the preset stations
In radio mode, press **M-/+** on remote control to access a preset station.

PLAY MODES(CD/MP3 ONLY)

Intro playback
Press **INTRO** button on remote control and “INTRO” appears on display. It will start to play the first 10 seconds of each track. Press **INTRO** button again to cancel this function and “INTRO” disappears on display.

Repeat playback
Press **REPEAT** button on remote control repeatedly to select a play mode:
- Repeat One : display shows “REP”.
- Repeat folder :display shows “REP ALB”. (MP3 only)
- Repeat All : display shows “REP ALL”.
To cancel repeat playback, press **REPEAT** button repeatedly until repeat indicator disappears.

Random playback
Press **RANDOM** button on remote control and “RDN” appears on display. It will play all tracks in random order. Press **RANDOM** button again to cancel this function and “RDN” disappears.

Program playback
1.In stop mode, press **PROG** button on remote control. The display will show “P01” and flashing “00” (“000” for MP3).
2.Use number buttons to input the track number and press **PROG** button to conform.
3.Repeat above steps to program up to 32 tracks.
4.Press ⏯ to start program playback.
5.Press **STOP** on remote control to stop the program playback and cancel this function.

USING HEADPHONES (NOT INCLUDED)

Inserting the plug of your headphones into the headphone jack will enable you to listen in private. When using headphones, the speaker will be disconnected.

NOTE: READ THIS IMPORTANT INFORMATION BEFORE USING YOUR HEADPHONES.
1.Avoid extended play at very high volume as it may impair your hearing.
2.If you experience ringing in your ears, reduce the volume or shut off your unit.

3.Keep the volume at a reasonable level even if your headset is an open-air type designed to allow you to hear outside sounds. Please note that excessively high volume may still block outside sounds.

Continuous use of earphones at high volume can damage the user's hearing.

SLEEP FUNCTION

In sleep mode, the unit will turn off automatically after a specified time.
You can select duration in minutes before the unit turns off automatically.
1.Press **SLEEP** button on remote control repeatedly to select 90-80-70-60-50-40-30-20-10-OFF. Release **SLEEP** button. “SL” icon remains on display.
Notes:
- Sleep time can only be set when the unit is turned ON.
- The sleep function is cancelled when “OFF” is selected, and “SL” icon disappears.

2. Press **SLEEP** button to check the remaining sleep time.
3.If you want to switch off the radio before sleep ends, press ⏻ **STANDBY** button.

MAINTENANCE

Cleaning
WARNING: Disconnect the unit from the mains supply before cleaning.
- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
-If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.

Notes on disc
* Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.
* Do not place more than one disc in the disc compartment.
* Do not try to open the disc compartment during playing.
* Do not touch the lens. Doing so may cause malfunction.
*If there is a scratch, dirt or fingerprints on the disc, it may cause tracking error. Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. Don't store discs in places with high temperatures or high humidity, they can become warped. After playing, store the disc in its case.

Important Note
• Before transporting the unit, remove the disc from the disc compartment.

SPECIFICATION

Power supply: AC 100-240V~ 50/60Hz
Power consumption : 20W
Speaker: 8 ohms

MORE INFORMATION

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside the unit. Refer all servicing to qualify personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of “ dangerous voltage” inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam. Class 1 laser product.

CLASS 1
LASER PRODUCT

IMPORTANT!
- The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The use of apparatus in moderate climates.
- The apparatus should not be exposed to dripping or splashing.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- The marking plate is located on the back of unit.
- Mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnected the power input, the mains plug of the apparatus shall be disconnected from the mains completely. The mains plug should not be obstructed or should be easily accessed during intended use.
- Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive).

Note: Design and specification are subject to change without notice.

CE

HX-3187 IB MUSE 001 REV0 -GB.ind1 1
2012-1-31 15:14:21